


Fuses

Fuse	Rating, Amperes	Function
F1	30	Engine management relay module
F2	30	Engine management relay module, inertia switch
F3	15	Alarm ECU
F4	10	Hazard warning lamps, instrument pack
F5	20	A/C relay pack
F6	20	Cooling fan relay (non A/C only), A/C relay pack (A/C only)
F7	15	ECM, Multi-function ECU
In-line	40	Electronic power assisted steering ECU

FUSE DETAILS

PASSENGER COMPARTMENT FUSE BOX

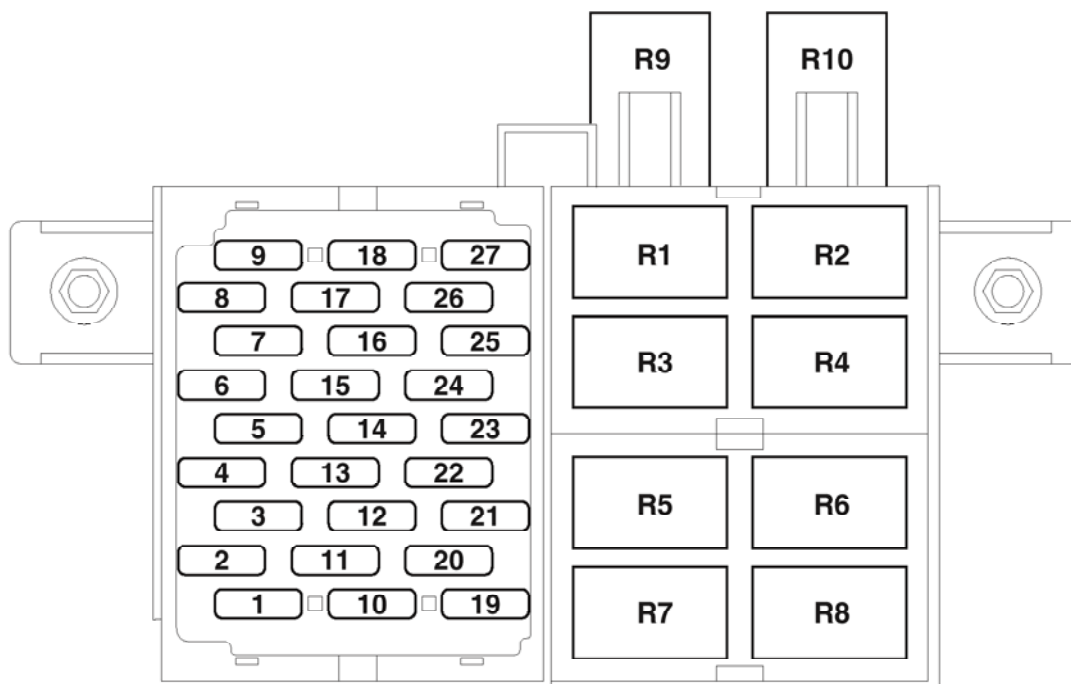

SP86 0249

RHD shown, LHD similar

Note: R9 and R10 are micro relays, mounted behind the fuse box on a bracket.

Fuses

Fuse	Rating, Amperes	Function
F1	10	Cigar lighter
F2	15	Window lift LH
F3	15	Interior lamps, diagnostic socket, clock, radio
F4	15	Window lift RH
F5	15	Front fog lamps
F6	-	Not used
F7	25	Heated rear window
F8	-	Not used
F9	10	Engine bay fan, window lift relay coil
F10	10	Headlamp main beam RH, main beam warning lamp
F11	10	Front side light RH, tail lamp RH
F12	10	Headlamp main beam LH
F13	10	Front side light LH, tail lamp LH, number plate lamps, BCU, interior illumination

Fuse	Rating, Amperes	Function
F14	10	Headlamp dip RH
F15	10	Radio, oil temperature gauge
F16	10	Headlamp dip LH, BCU
F17	20	Heater blower
F18	10	Rear fog lamps
F19	20	Washers and wipers
F20	10	Crank relay coil
F21	15	ABS modulator
F22	10	Mirrors
F23	15	BCU, ECM, fuel pump relay coil
F24	10	Air conditioning switch and relay pack, cooling fan relay coil, condenser fan relay coil
F25	10	Seat belt switch, EPAS ECU, auto-selector lamp
F26	15	Brake lamps, reverse lamps
F27	5	SRS DCU

Relays

Relay	Function
R1	Window lift
R2	Engine bay fan
R3	Heated rear window
R4	Air conditioning cooling fan 1
R5	LH indicator
R6	Front fog lamps
R7	RH indicator
R8	Air conditioning
R9	Air conditioning
R10	Air conditioning